פח נשלף PD350/PD500 - הוראות הרכבה

DOMICILE & הפרזול החומרים שעושים את ההבדל

Auto Door Bin

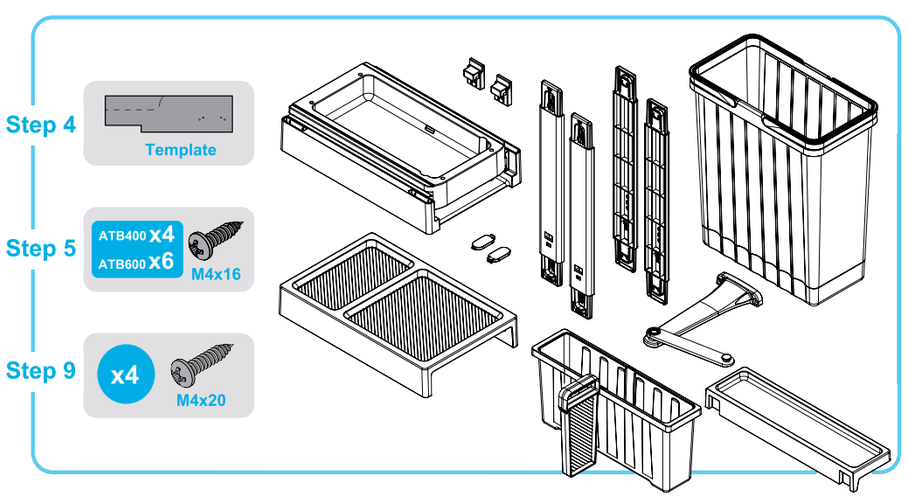

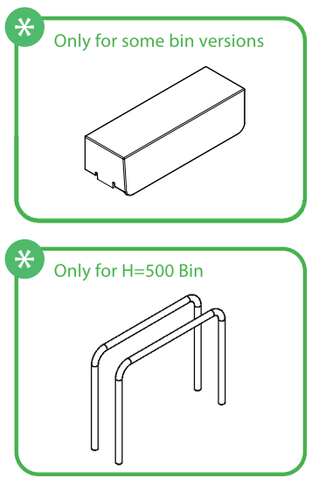

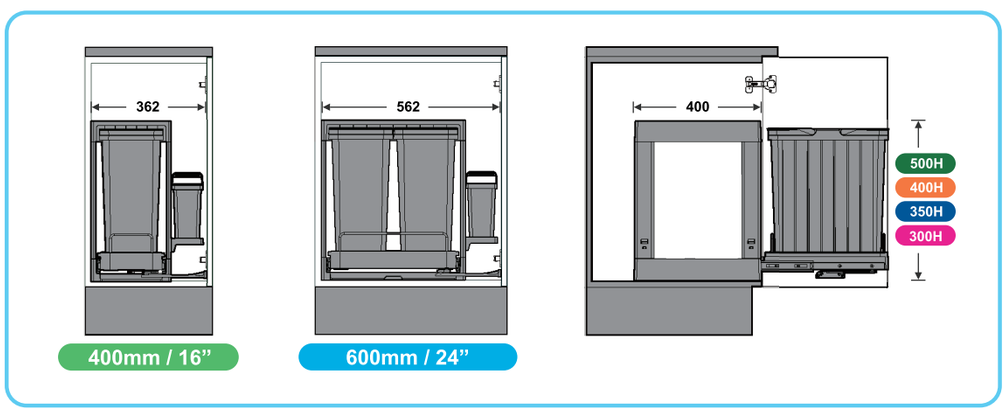

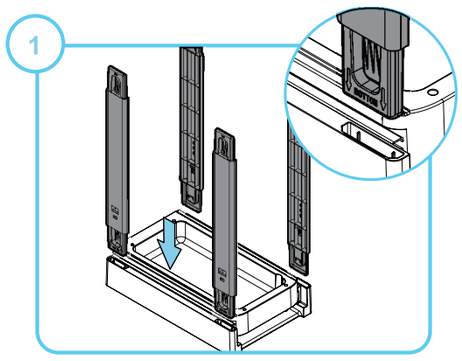
Install legs into base as diagram

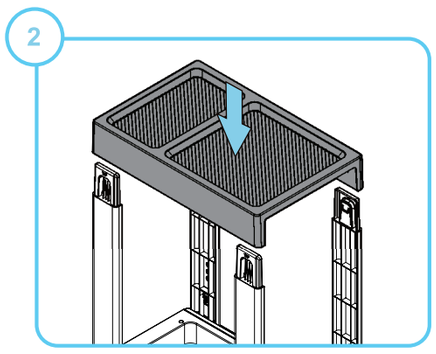
Install top cap

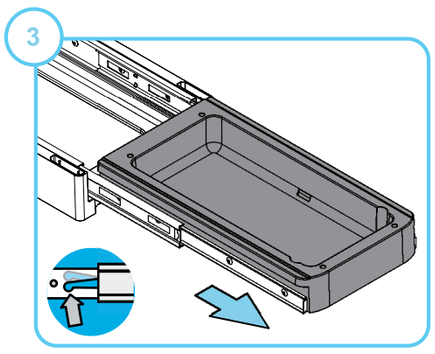
Separate runners from assembly using runner clips

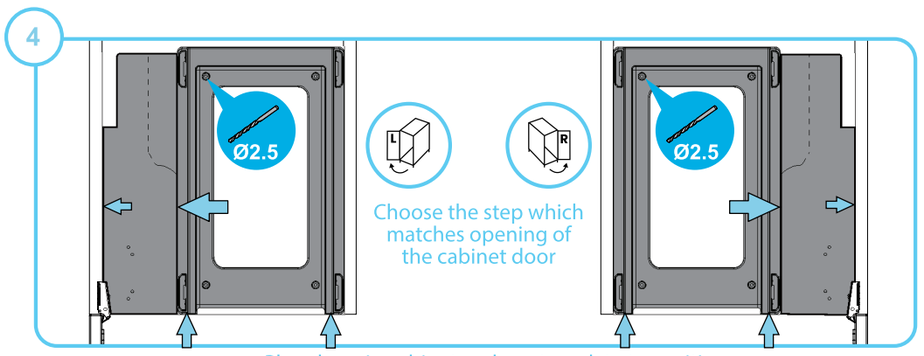

Place base in cabinet and use template to position base, mark, and drill holes

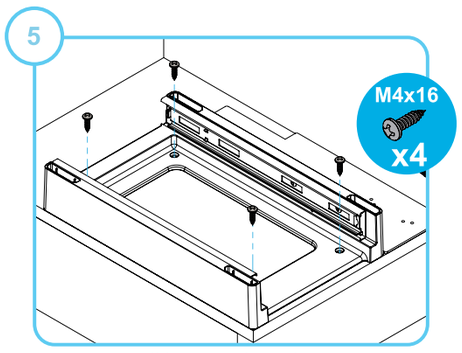

Install base to the cabinet

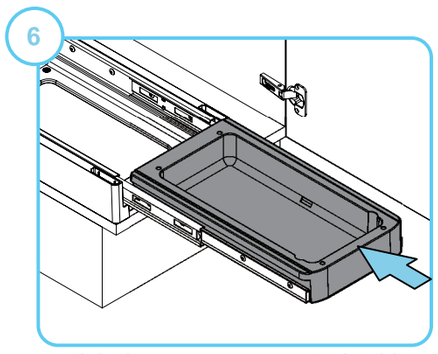
Slide the tray into runners, it should make a click sound

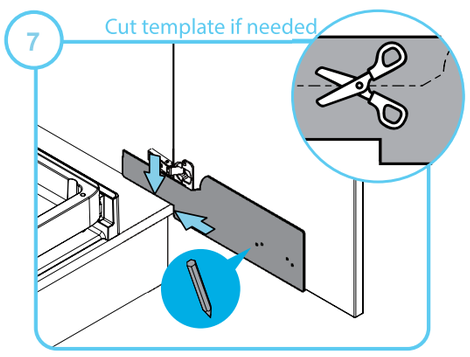

Use template to mark hole positions in door

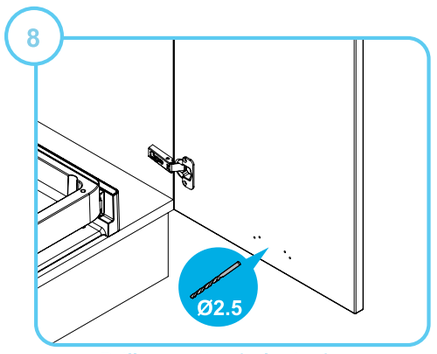

Drill mounting holes in door

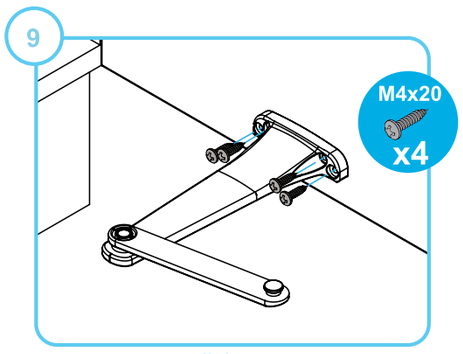

Install door arm

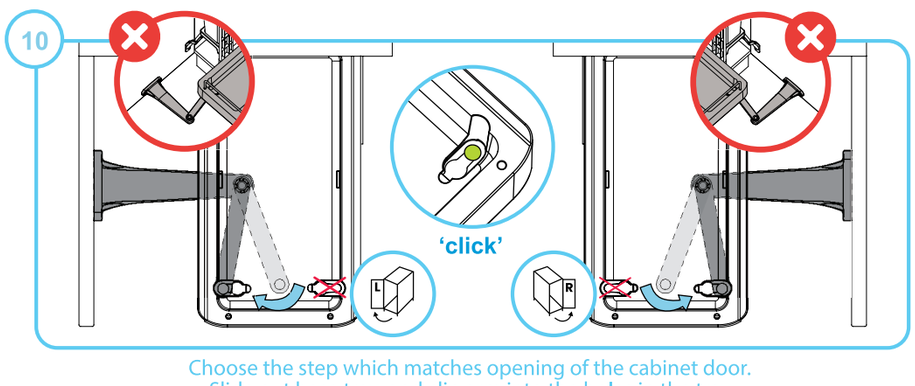

Choose the step which matches opening of the cabinet door.
Slide out base tray, and clip arm into the holes in the tray

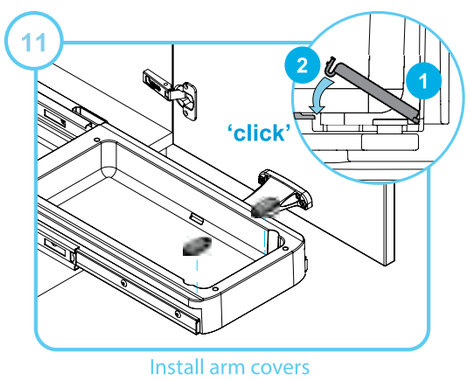

Install arm covers

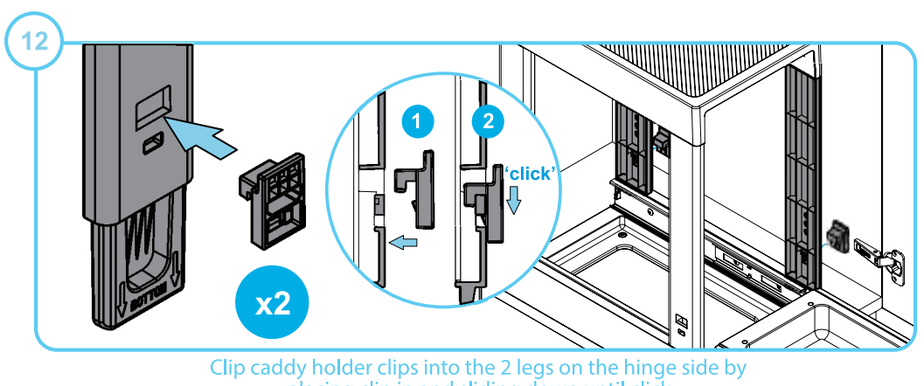

Clip caddy holder clips into the 2 legs on the hinge side by placing clip in and sliding down until click

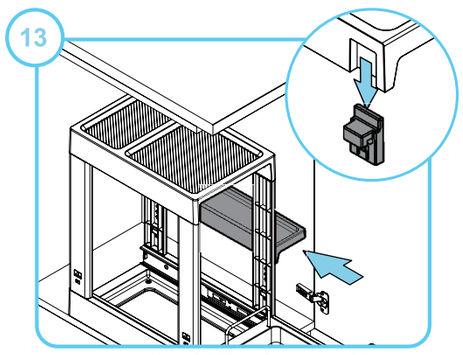
Install caddy holder onto clips

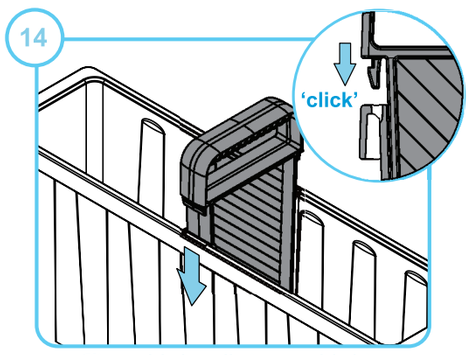
Clip caddy handle into caddy bin

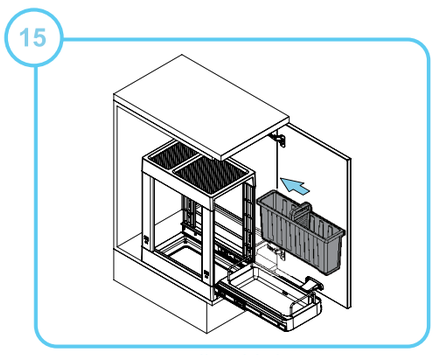
Install caddy bin

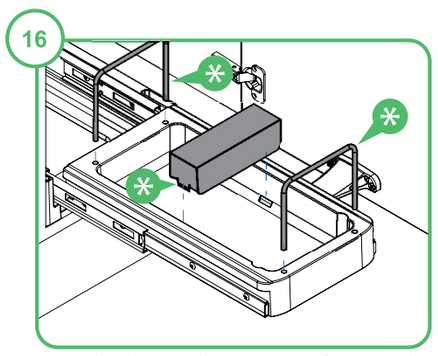
Install additional accessories if supplied

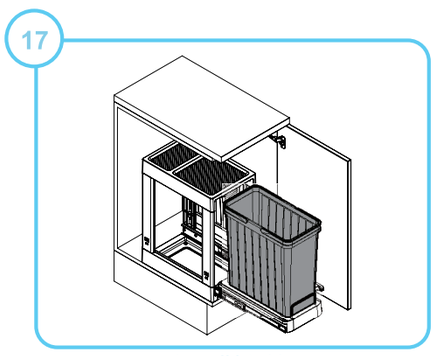
Install bin(s)

Tips: You can also refere to the below mounting hole pattern for proper installation. Always measure from the hinge side.

Cabinet 400mm

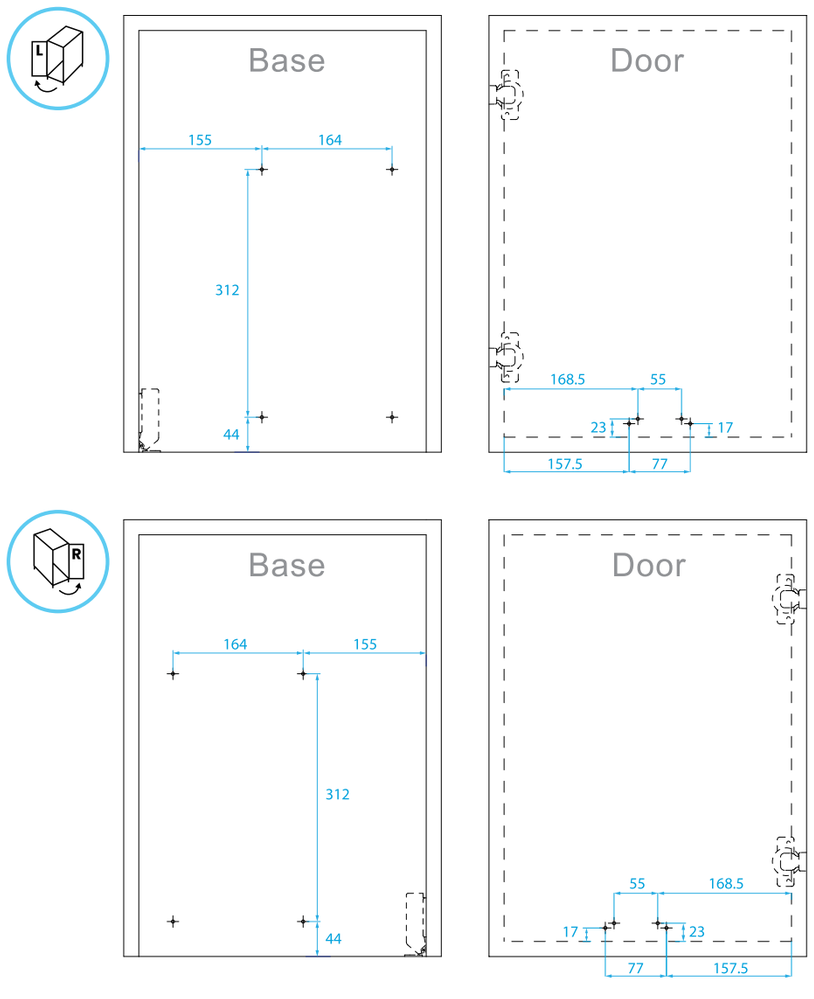
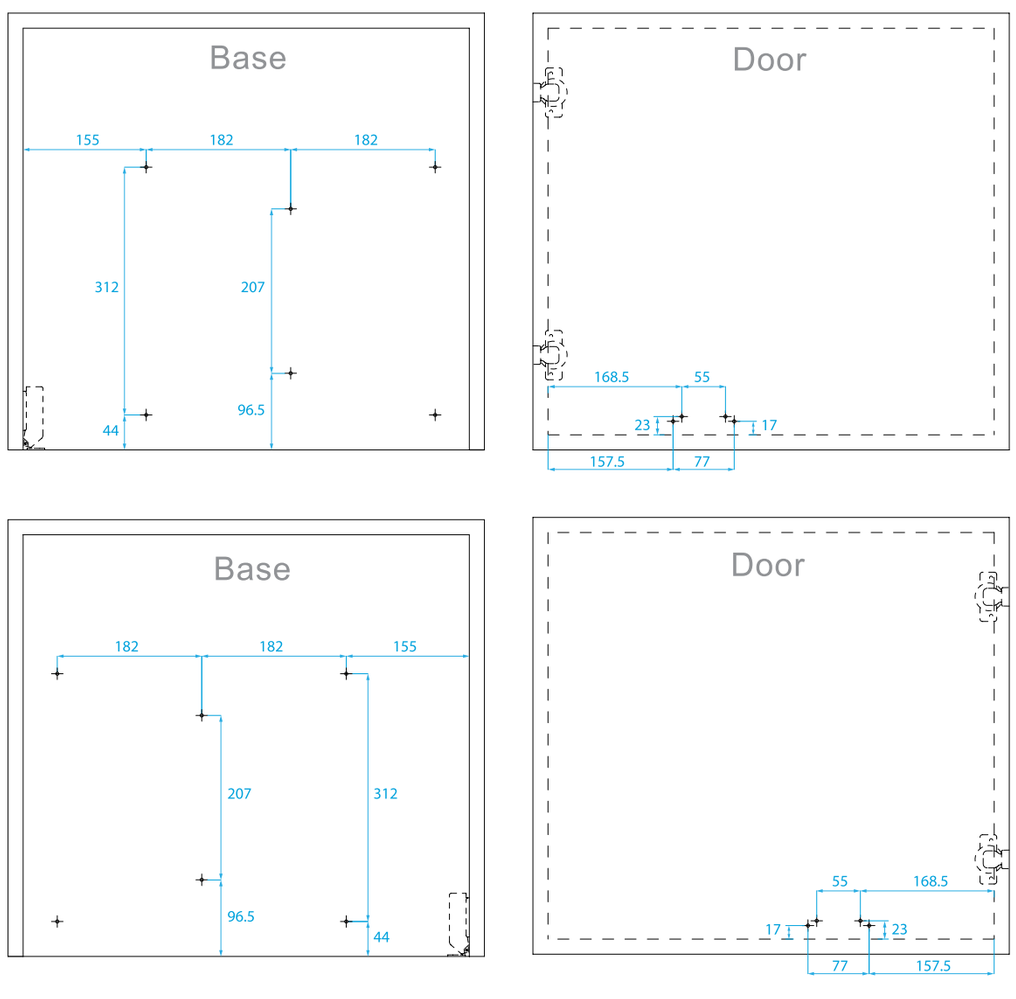
Cabinet 600mm