

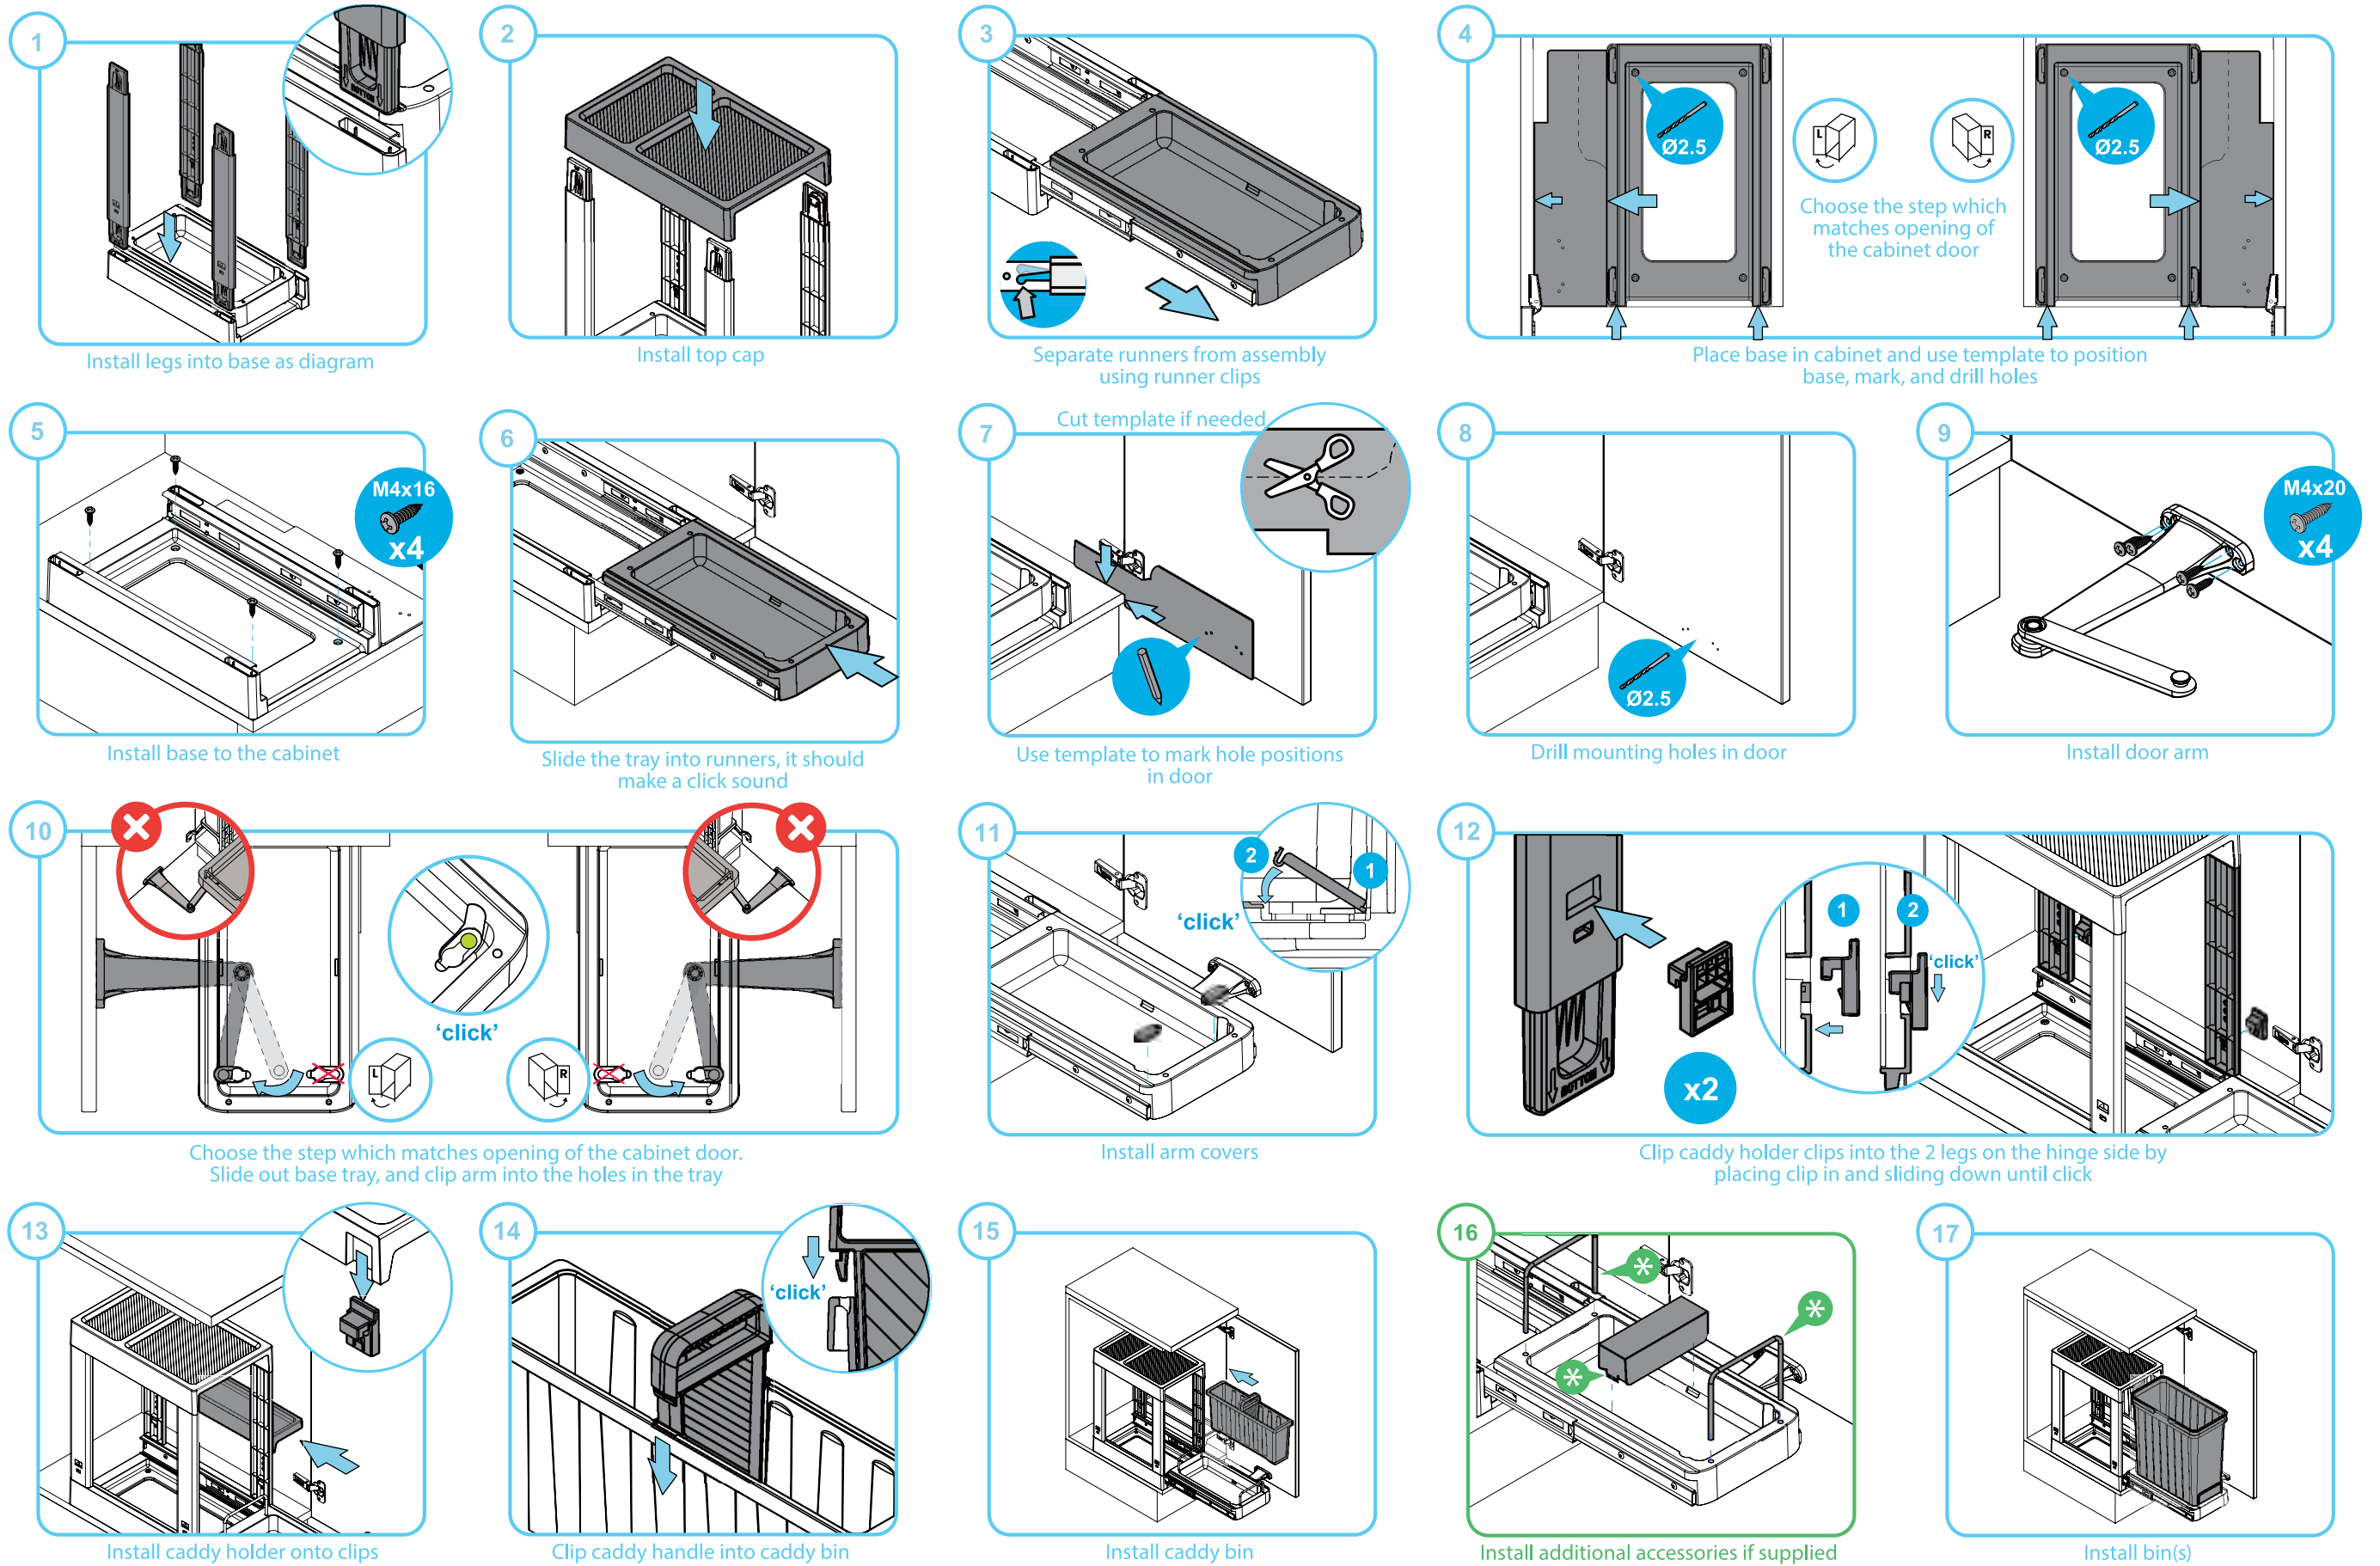
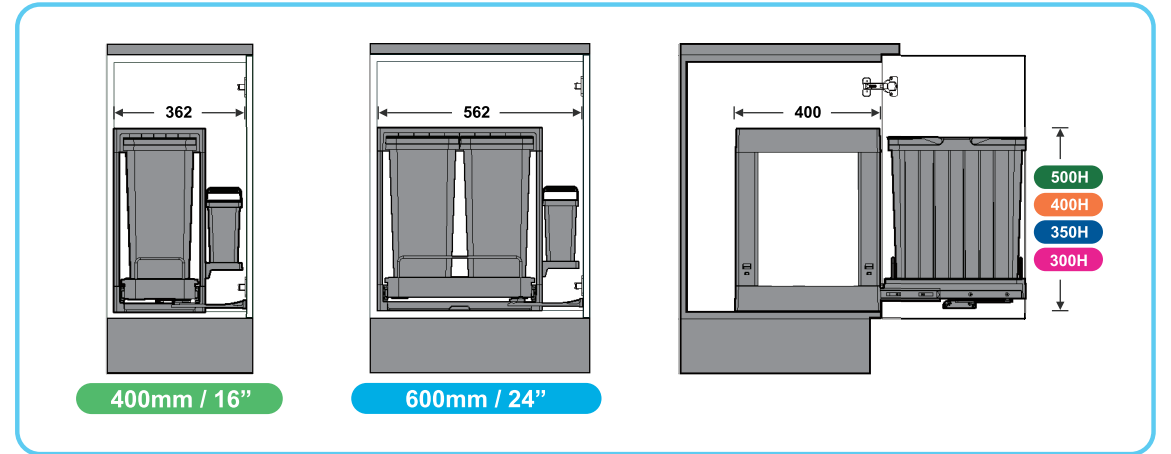
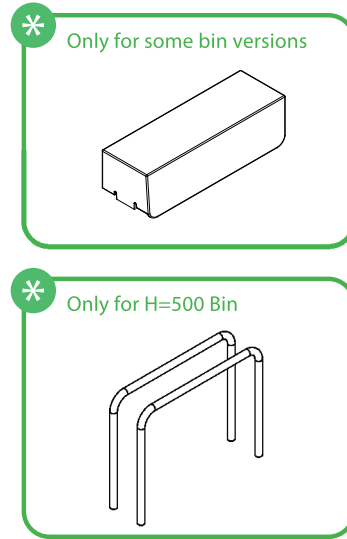


Auto Door Bin

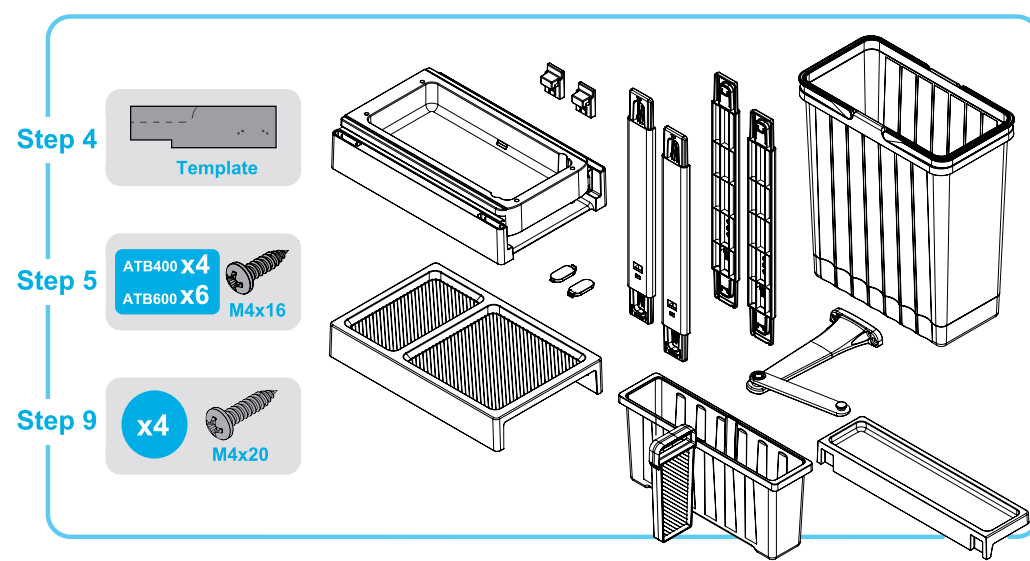

Tips: You can also refer to the below mounting hole pattern for proper installation. Always measure from the hinge side.

Cabinet 400mm

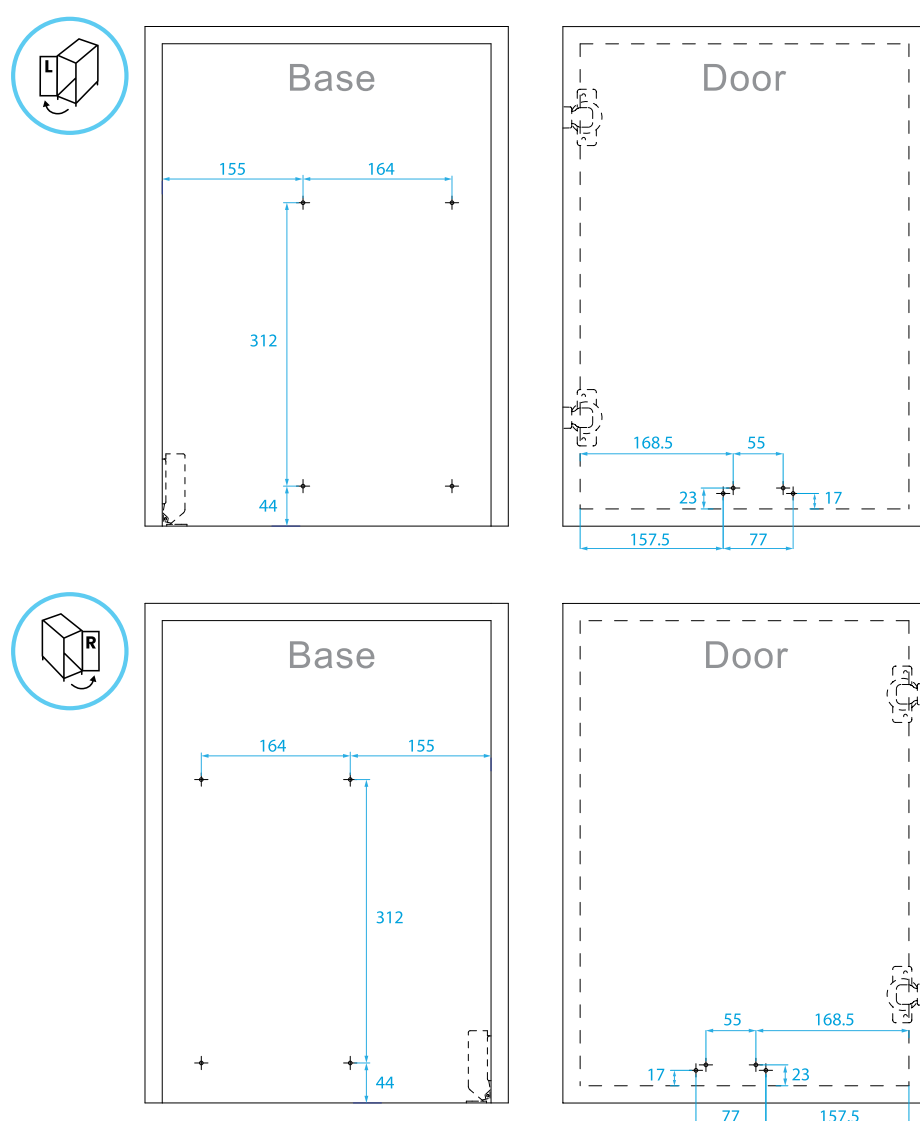

Cabinet 600mm

